

Installation Manual

Fixed Flyscreen **SP1 / 5** Mounting: **Spring pins**



For your safety



- Ensure that the area below the door is not entered during assembly.
- When working under raised parts or work equipment, they must be secured with suitable devices against dropping.
- The insect screen is not suitable as an anti-fall device.
- The assembly may only be carried out by qualified personnel.




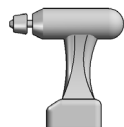


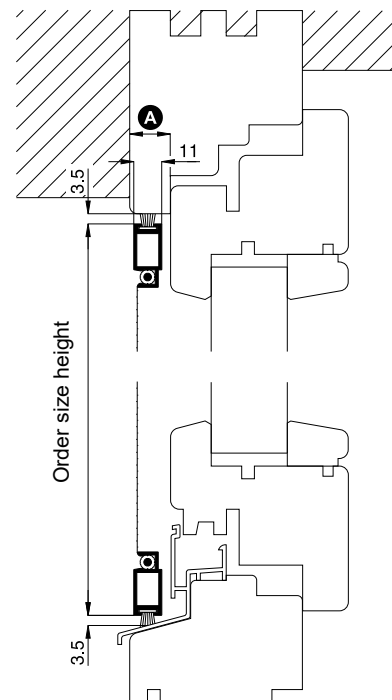
General information

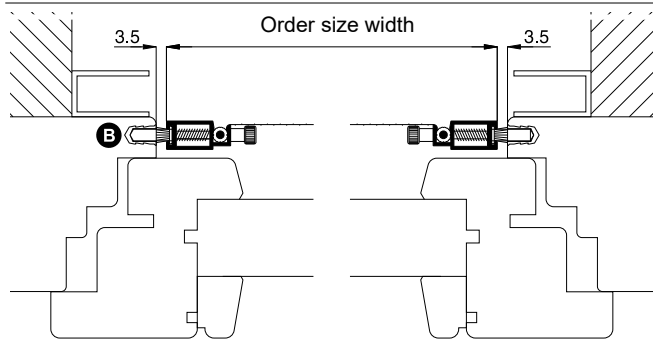


- No additions or modifications may be made to the product.
- Check that the parts are in good condition before assembly. No damaged parts may be installed.



Please read this assembly manual carefully, as we can not be held liable for faults caused by incorrect installation. Only use stainless steel screws for mounting.

Parts	Recommended tools	Vertical Section
 Plugs 4 x 13 23 33	 Power drill  Drill bits  Hammer	

Horizontal section


1 Mounting fixed flyscreen frame

Hold the flyscreen by the frame and position it inside the window frame opening where you want to install the flyscreen. In order to do that, slide the flyscreen in place on one side, pushing the spring pins in all the way.

Then pull the spring pins on the other side and slide the flyscreen in place on that side as well.

! Do not damage the fabric while handling it!

Check that the flyscreen frame is aligned all the way around, and if necessary adjust the position of the frame. Slightly tap on all 4 pins to mark the location of the pins in the window frame. Then remove the flyscreen.

Carefully drill at the marked points with the drill bit size \varnothing 6.6 mm. Then position and place the plugs into the holes and gently hammer them in.

Install the flyscreen into the window frame by pulling the spring pins out and letting them snap into the plugs.

! Check to see that all the spring pins are fully engaged!

