

Installation Manual

Hinged frame for doors **DT3/5.AMB** with mounting frame

For your safety.



- Ensure that the area below the door is not entered during assembly.
- When working under raised parts or work equipment, they must be secured with suitable devices against dropping.
- The insect screen is not suitable as an anti-fall device.



- With the "muted door" option, the magnets can influence the function of heart pacemakers and implanted defibrillator. If you carry a pacemaker keep a sufficient distance from the magnets. Required instructions are included in the manuals for these devices.
- The assembly may only be carried out by qualified personnel.








General information



- No modifications, additions or modifications may be made to the product.
- Check that the parts are in good condition before assembly. No damaged parts may be instal




Please read this assembly manual carefully, as we can not be held liable for faults caused by incorrect installation take! Only use stainless steel screws for mounting.


Parts	Parts	Recommended tools				
 <p>Handle 10mm 13 35 52.xx.10</p> <p>RK 3,5 x 9,5 15 03 35.09.TX</p>	 <p>Cap 14 23 91</p> <p>RK 3,5 x 13 15 03 35.13.TX</p>	 <p>Lube spray 21 23 30</p>	 <p>Power drill</p>	 <p>TX10 TX15 TX20</p> <p>Screw driver and torx bits</p>	 <p>HSS drill bit ø 4,5 mm ø 3,1 mm ø 2,5 mm</p> <p>Counter-sinker 8mm</p>	 <p>Hole puncher 17 03 60</p>

Presenation: External mounting frame (AMB)

Horizontal section

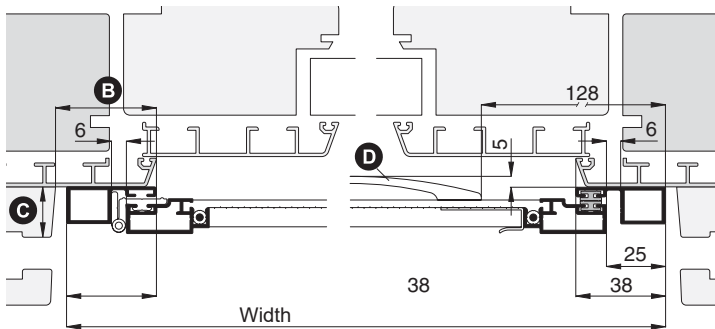


Vertical section

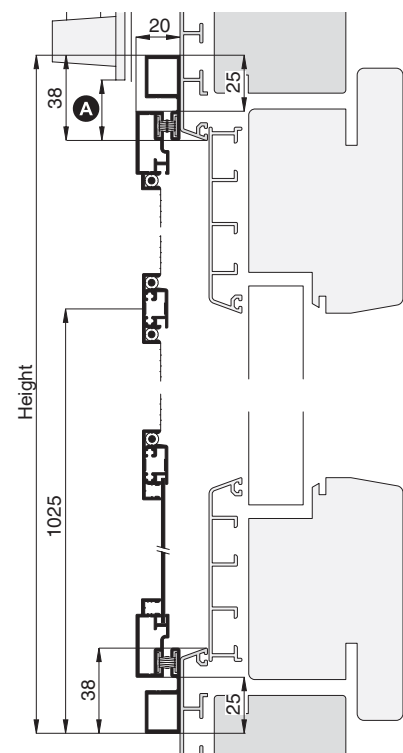


Possible mounting types

Installation from the front

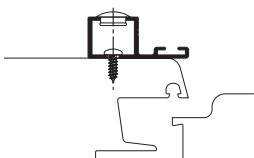

Installation on the side

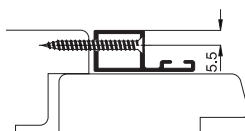

Installation Manual

Hinged frame for doors DT3/5.AMB with mounting frame.



1 Prepare the assembly

Determine the position of the mounting frame in front of the door frame.

Keep the mounting frame upright. Open and lift the sash to take it out. Pull out the hinge pins upwards.

Keep the mounting frame upright. Open and lift the frame. Pull out the hinge pins upwards.

 **Do not damage the fabric during work!**

2 Mounting the frame

Align the frame horizontally and vertically on the door frame according to the specified dimensions and transfer the mounting holes.

Pre-drill accordingly.



In timber and plastic windows pre-drill with 2.5 mm drill bit. In aluminum windows pre-drill with drill Ø 3.1 mm.

Screw the mounting frame and cover the caps. Replace the insect protection frame and insert the hinge pins.



Spray hinge pins before assembly with lube spray to reduce wear and tear and to avoid squeaking noises in the future.

 **Ensure parallel alignment of the side mounting frame profiles! Match lengths of the diagonals!**

 **Check the safe hold of the insect screen**